

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

Installation, Operation & Maintenance Instructions

Foreword

This instruction manual is provided to familiarize the user with the seal and its designated use. The instructions must be read and applied whenever work is done on the seal, and must be kept available for future reference.

ATTENTION These instructions are for the installation and operation of a seal as used in rotating equipment. The instructions will help to avoid danger and increase reliability. The information required may change with other types of equipment or installation arrangements. This manual must be read in conjunction with the instruction manuals for both the pump and any ancillary equipment.

If the seal is to be used for an application other than that originally intended or outside the recommended performance limits, John Crane must be contacted before its installation and use.

Any warranty may be affected by improper handling, installation or use of this seal. Contact John Crane for information as to exclusive product warranty and limitations of liability.

If questions or problems arise, contact your local John Crane representative or the original equipment manufacturer, as appropriate.

ATTENTION John Crane mechanical seals are precision products and must be handled appropriately. Take particular care to avoid damage to lapped sealing faces and to flexible sealing rings. Do not excessively compress the seal before or during installation.

Safety Instructions

1. The following designations are used in the installation instructions to highlight instructions of particular importance.

NOTE Refers to special information on how to install or operate the seal most efficiently.

ATTENTION Refers to special information or instructions directed toward the prevention of damage to the seal or its surroundings.



Refers to mandatory instructions designed to prevent personal injury or extensive damage to the seal or its surroundings.

- Installation, removal and maintenance of the seal must be carried out only by qualified personnel who have read and understood these installation instructions.
- The seal is designed exclusively for sealing rotating shafts. The manufacturer cannot be held liable for use of the seal for purposes other than this.
- The seal must only be used in technically perfect condition, and must be operated within the recommended performance limits in accordance with its designated use and the instructions set out in these instructions.

- If the pumped fluid is hazardous or toxic, appropriate precautions must be taken to ensure that any seal leakage is adequately contained. Further information on sealing hazardous or toxic fluids should be obtained from John Crane prior to seal installation.
- Fluorocarbon components should never be burned or incinerated as the fumes and residues are highly toxic. If fluorocarbons are accidentally heated above 400°C/750°F, they can decompose. Protective gloves should be worn as hydrofluoric acid may be present.
- PTFE components should never be burned or incinerated as the fumes are highly toxic.

Before Starting the Equipment

- Check the pump at the coupling for proper alignment of the driver or motor.
- Ensure that the gland plate nuts/bolts are securely tightened according to the pump manual instructions, and all screws are securely fastened.
- Complete the assembly of the pump and turn the shaft (by hand if possible) to ensure free rotation.
- Consult all available equipment operating instructions to check for correctness of all piping and connections, particularly regarding seal recirculation/flush, heating or cooling requirements, and services external to the seal.

ATTENTION This mechanical seal is designed to operate in a liquid, so the heat energy it creates is adequately removed. The following check should be carried out not only after seal installation, but also after any period of equipment inactivity.

- Check that the seal chamber fluid lines are open and free of any obstruction, and ensure that the seal chamber is properly vented and filled with liquid — refer to the pump instruction manual.


ATTENTION Except for dry running or gas lubricated seals which are designed to operate without liquid, wet seals that are operated without adequate liquid lubrication will often give rise to a squealing noise from the seal area and result in overheating and scoring or other damage to the sealing surfaces, causing excessive emissions and a reduced seal life.



Before start-up, ensure that all personnel and assembly equipment have been moved to a safe distance so there is no contact with rotating parts on the pump, seal, coupling or motor.

WARNING

Seal installation should be handled only by qualified personnel. If questions arise, contact the local John Crane representative. Improper use and/or installation of this product could result in injury to the person and/or harmful emissions to the environment, and may affect any warranty on the product. Please contact the company for information as to exclusive product warranty and limitations of liability.

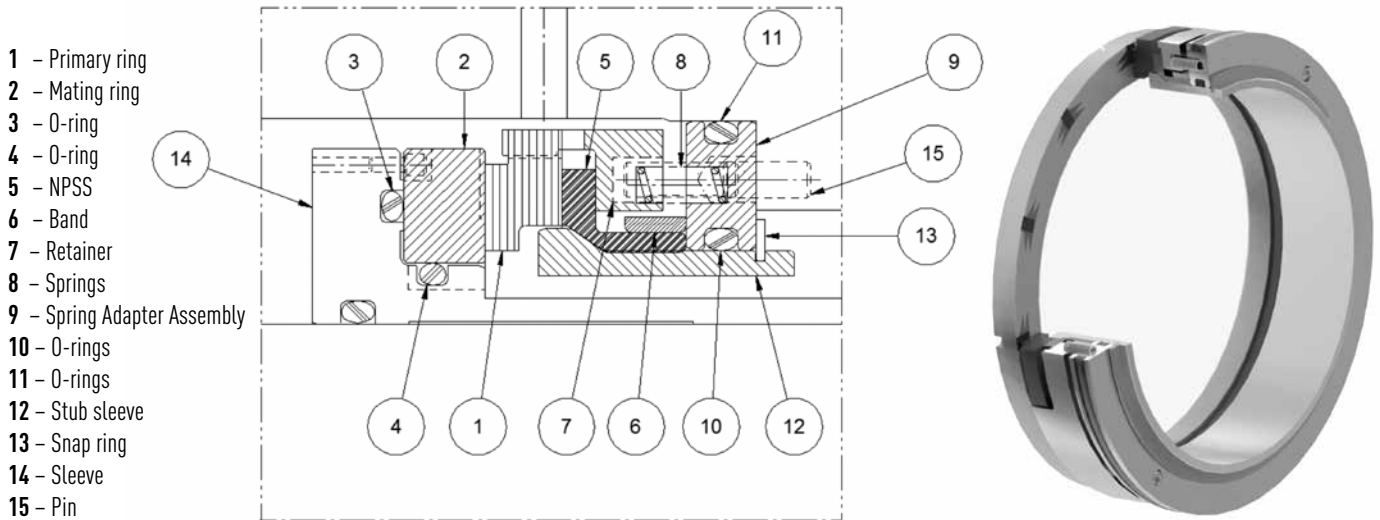

Operating Conditions

The following are the operating limits of the 8628VSC seals. The selection of materials used in the construction of the seal should be made with regard to their temperature and chemical resistance/ compatibility with the liquid being sealed.

| | |
|--------------------|---|
| Temperature limits | -4° to 400°F/-20° to 204°C depending on the materials used |
| Pressure limits | Up to 75 psig/5 barg (gas operation) Up to 1500 psig/103 barg (liquid operation) depending upon size and design |
| Speed limits | Up to 6000 fpm/30.5 m/s |

General Instructions

1. Be sure to read all instructions carefully before installing seal.
2. The John Crane 8628VSC seals are precision products and are shipped as completely assembled cartridge seals for ease of installation.

Installation Dimensions

For dimensional data on the seal installation, please refer to the specific John Crane layout drawing.

Imperial/metric conversions


| | |
|-----------------------|---------------------|
| .060" x 20° | = 1.6 mm x 20° |
| 63V (µin) | = 1.6V (µm) |
| 0.005" | = 125 micrometer |
| 0.0005" per inch bore | = 15 micrometer/3cm |
| 0.001" | = 25 micrometer |

NOTE


It is recommended that the pump and its installation meet the requirements of the latest edition of API Standard 610. Equipment that meets these requirements will aid in extending mean time between planned maintenance.

Preparing the Equipment


1. Check the shaft and seal chamber dimensions and finishes as noted. Check dimensions per specific John Crane layout drawing.

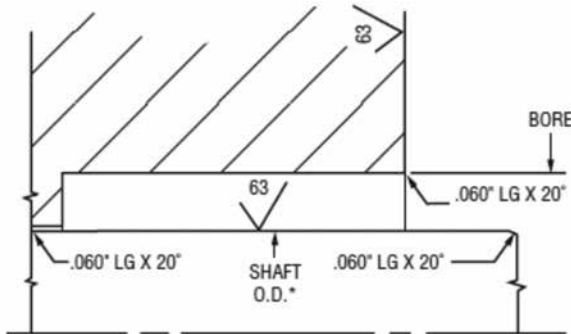


4. Measure the concentricity of the seal chamber bore to the shaft. This value should not exceed 0.005" F.I.M.

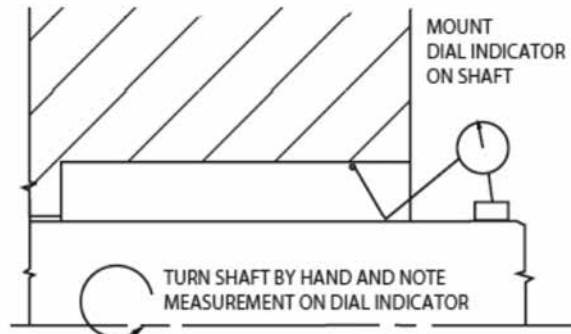


2. Measure the shaft end float/end play. The maximum value should not exceed 0.005" F.I.M.. Remove all sharp edges and burrs over which the seal sleeve must pass.

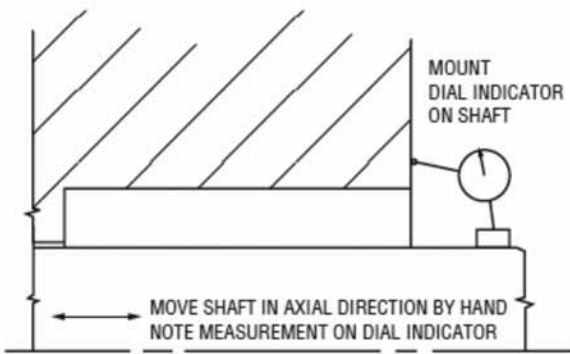

5. Measure the shaft runout at the seal location. The maximum value should not exceed 0.001" F.I.M.

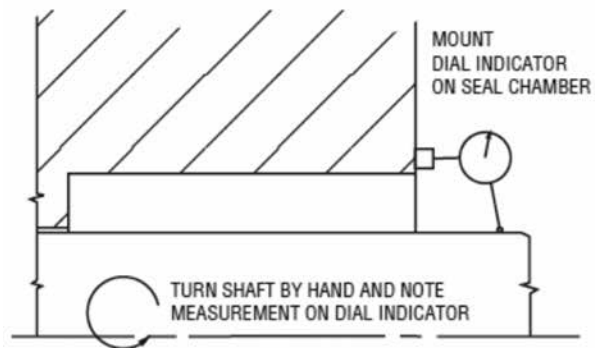

3. Check the squareness or face runout of the seal chamber face to the shaft. The maximum value should not exceed 0.0005" per inch of seal chamber bore diameter, F.I.M.

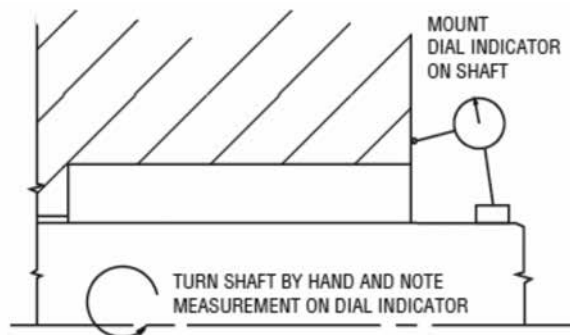

NOTE

If the measured dimensions exceed these values given, correct the equipment to meet the specifications prior to installing the seal cartridge.

Installing the Seal

1. Before starting the installation, read through the following instructions carefully, as the sequence may be different depending on the construction of the pump.
2. Remove the seal from its packaging, inspect the seal for any damage and wipe clean.
3. The equipment should be clean and meet the specifications noted in "Preparing the Equipment". Check the sleeve and gland secondary seal. Apply a lubricant, if necessary, to assist in assembly. The gland plate nuts should be lubricated in order to achieve proper torque values.

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

Installation, Operation & Maintenance Instructions

Installing the Seal (cont.)

4. The seal cartridge contains four (4) spacers that set the working height of the seal. On some equipment, the lower spacer is not accessible once the seal is installed onto the shaft. In these instances remove the lower spacer.
5. **For overhung pumps with single-row collar:** Check that the drive collar set screws are engaged in the sleeve holes without touching the shaft. Slide the seal cartridge onto the shaft as close to the nearest obstruction as possible. Position the gland plate so the flush connection, marked "F" is at or near top dead center. Install the seal chamber onto the pump and tighten the bolts to the bearing frame. Slide the seal cartridge onto the studs. Hand tighten the gland plate nuts.
5. **For between-bearing pumps with single-row collar:** Check that the drive collar set screws are engaged in the sleeve holes without touching the shaft. Slide the seal cartridge onto the shaft. Position the gland plate so the flush connection, marked "F", is at or near top dead center. Hand tighten the gland plate nuts.
5. **For between-bearing pumps with double-row collar:** Check that the drive collar set screws are engaged in the sleeve but do not protrude through the outer row threaded holes of the collar so as to touch the shaft during assembly. Slide the seal cartridge onto the shaft. Position the gland plate so the flush connection, marked "F", is at or near top dead center. Install the seal cartridge onto the studs. Hand tighten the gland plate nuts.
6. Reassemble the pump and make all necessary impeller adjustments.
7. Tighten the gland plate nuts in an alternating pattern until secure (1/4 turns, 180° apart), with gland plate and face of pump seal chamber metal to metal.
8. Check the gland/pump housing gap at each stud location to ensure even tightening. Tighten the outside lock collar set screws.
9. The collar can be rotated with the spacers intact. Once all the collar set screws are tightened, loosen the cap screws and rotate the spacer free of rotating parts. The spacer can be locked into place, out of the way of the collar, for future use, or removed and stored. Repeat the above for each spacer independently.
10. Use the spacers any time the gland nuts or collar set screws are loosened to properly set the seal to its working height.
11. Piping connections can now be made to the gland plate.

WARNING Be sure to make the proper gland plate connections to the process and atmospheric sides of the seal.



The spacers must be positioned out of the way of the collar and tightened down prior to starting up the pump.

After the Equipment has Run

1. Ensure that the pump is electrically isolated.



If the equipment has been used on toxic or hazardous fluids, ensure that the equipment is correctly decontaminated and made safe prior to commencing work. Remember fluid is often trapped during draining and may exist outside the seal. The pump instruction manual should be consulted to check for any special precautions.

2. Ensure that the pump is isolated by the appropriate valves. Check that the fluid is drained and pressure is fully released.

Removing the Seal Cartridge

1. Referring to the pump installation manual, dismantle the equipment sufficiently to expose the gland plate and seal chamber.
2. **For overhung pumps with single-row collar:** Reinstall or rotate the spacer back into place over the collar and retighten the cap screws. Loosen the set screws in the collar. The cap screws that engage the spacer need only be flush with the top of the spacer. The remaining set screws should be loosened just enough so they still engage the sleeve drill-through holes. Evenly loosen and remove the gland plate nuts and carefully slide the plate off the studs. Remove the pump casing/seal chamber and the abutment or spacer when fitted, and then complete the removal of the seal cartridge in the reverse order of installation.
2. **For between-bearing pumps with single-row collar:** Reinstall or rotate the spacer back into place over the collar and retighten the cap screws. Loosen the set screws in the collar. The cap screws that engage the spacer need only be flush with the top of the spacer. The remaining set screws should be loosened just enough so they still engage the sleeve drill-through holes. Evenly loosen and remove the gland plate nuts and carefully slide the seal cartridge off the shaft.
2. **For between-bearing pumps with double-row collar:** Loosen the collar set screws and remove the collar. Remove the raised material on the shaft in the area of the set screws and replace the collar. Tighten the inner set screws onto the sleeve. Reinstall or rotate the spacer back into place over the collar and retighten the cap screws. Loosen or install the collar set screws that correspond to the spacer to be flush with the top of the spacers. Evenly loosen and remove the gland plate nuts and carefully slide the seal cartridge off the shaft.



The spacers need to be in place prior to seal assembly removal. Failure to install the spacers can result in damage to the seal faces.

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

Installation, Operation & Maintenance Instructions

Piping Connections

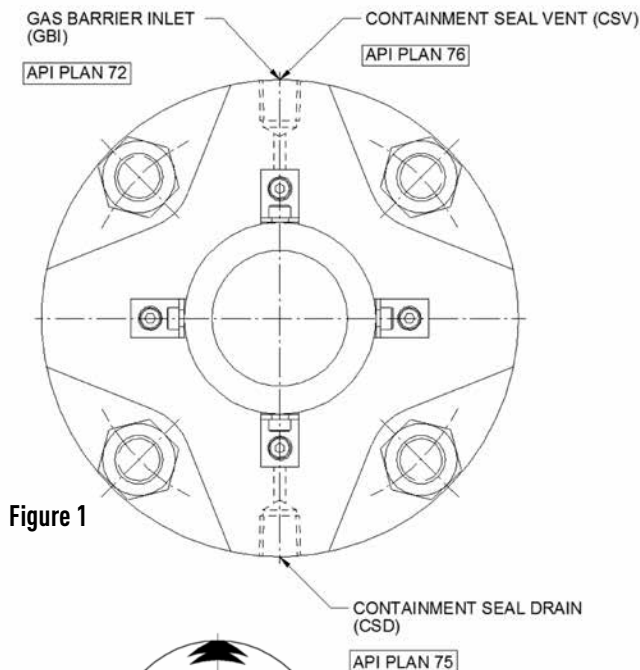


Figure 1

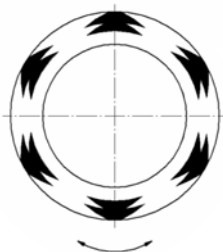


Figure 2

Bi-directional Profile

Mating ring with bi-directional groove pattern

Shaft rotation is clockwise or counter clockwise, facing bi-directional groove pattern. Mating ring is rotating.

NOTES

- Bi-directional groove pattern on Mating ring works effectively on either direction of the shaft rotation. Figure 2.
- The gland plate is normally provided with three pipework connections, CSV, GBI and CSD.
- The CSV (containment seal vent) connection is recommended and should be used with API Plan 76 to divert non-condensing primary seal emissions to a flare or vapour recovery system. It requires a 3 mm or 0.125" orifice connected and high pressure alarm switch at 0.5 bar (or 7 psi) above the mean operating condition in the flare or vapour recovery system.
- The GBI (gas barrier inlet) connection is optional and should be used with API Plan 72 if there is primary seal emission debris, coking, crystallization or icing. Provide an external purge of clean dry gas (typically nitrogen or air) with a recommended flow rate of 14–17 l/min (0.5–0.6 scfm) or 0.3–0.7 barg (5–10 psig) differential pressure through a 1.6 mm (0.062 inches) orifice.
- The CSD (containment seal drain) connection is optional and should be used with API Plan 72 if there is condensing primary seal emissions. The condensed (or liquid) emissions are guided towards a drain collection system. CSD should be metal plugged or closed during operation, or gas barrier pressure will be lost.

- All connections should be protected with metal or plastic plug during shipping and storage for protection against contamination.
- Gas lines must be in suitable material to avoid corrosion and contamination of the barrier gas.
- Unused tapped connections must be safely plugged before seal operation.

Storage and Transport

- Mechanical seal assemblies and component parts must be treated with extreme care to protect them from damage due to handling and deterioration. In all cases if established company procedures differ from the instructions provided in this document, the established procedures shall be followed.
- Warehouse shelf storage:**
 - John Crane mechanical seals and components are packaged to protect them from airborne dirt and grit, as well as from mishandling. If the packaging is removed for inspection, it should be replaced. Seals are generally packaged dry. Elastomer shelf life can be a factor if the storage period is in excess of two years.
 - If storage is in excess of one year, it is recommended that the primary and mating rings be inspected for flatness prior to installing the seals into the pump.
- Storage of single seals in pumps:**
 - If the mechanical seal is to be stored in the equipment, the seal cavity shall be drained of all water to prevent damage due to freezing temperature.
 - Any foreign matter should be removed as soon as possible after delivery of the pump on site. The open area between the gland plate and sleeve must be masked to exclude dirt after cleaning.
 - Cover pump suction and discharge flanges to exclude airborne debris.
 - All open ports in the gland plate and seal chamber must be plugged with metal plugs.
 - Seals that will be used on hydrocarbon based services can be fogged and filled approximately one-quarter (1/4) with a VPI oil. Alternately the seals can be preserved using an oil, or other suitable liquid, mist system.
 - Mark and rotate the shaft several revolutions weekly. Leave the shaft 90° from the previous position.
 - Seals in storage for more than two years should be disassembled to allow inspection of the primary and mating ring faces.

For additional information on transportation and storage, contact your local John Crane facility and request a copy of document I-Storage.

ATTENTION Ensure preservatives and cleaning agents do not affect the elastomers

ATTENTION Once the seal is fitted on the machine and the position is set using setting devices do not re-engage them for transportation and storage

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS

Installation, Operation & Maintenance Instructions

Hazardous Environment

ATTENTION Every working practice which compromises safety must be avoided.

In the event of an operating problem the machine must be switched off immediately and made safe! Problems must be solved promptly. Minor emissions will occur during normal seal operation. Depending on the duty, this emission can appear as a gas, a liquid or a solid. For emissions that are hazardous or toxic and a safe collection system is required.

Hot surfaces have to be protected against accidental contact.

In order to avoid unforeseen hazards do not make unauthorised changes to the sealed fluid, the specific duty or the seal parts.

Some mechanical seals are used in conjunction with an ancillary support system; this is clarified either by the flush plan description on the seal arrangement drawing or by contacting John Crane (also see Section 11). It is important for the safe function of the seal that the support system is assembled and incorporated into the machine before operation. This manual should be read in conjunction with the appropriate documentation for auxiliary systems and rotating machinery.

ATTENTION Alarm systems are often included in the ancillary support system and the operator must ensure appropriate action is taken promptly in the event of an alarm.

Maintenance with steel tools must be avoided in the presence of substances classed as explosive group IIc according to EN 60079-0:2012+A11:2013. If the machine is being used in an EN 60079-0:2012+A11:2013 Zone 21 or 22, regular cleaning of dust from exterior surfaces is required.

Declaration of Incorporation (2006/42/EC)

For each standard product supplied into the EU a Technical File is required and a Technical Record Sheet, satisfying the needs of 2006/42/EC. When requested, a Declaration of Incorporation (for which a Technical File exists) will be raised and signed by a John Crane appointed representative.

Quality Assurance

This seal has been assembled in accordance with John Crane quality assurance standards and with proper maintenance and use will give safe and reliable operation to the maximum recommended performance as shown in any relevant approved John Crane publication.

Maintenance

No maintenance of a seal is possible while installed. It is recommended that a spare seal unit and mating ring be held in stock to allow immediate replacement of a removed seal. It is recommended that used seals are returned to a John Crane service location, as rebuilding to as new specifications must be carried out by qualified personnel. Assurance standards and with proper maintenance and use will give safe and reliable operation to the maximum recommended performance as shown in any relevant approved John Crane publication.



It is the responsibility of the equipment user to ensure that any parts being sent to a third party have appropriate safe handling instructions externally attached to the package.



North America
United States of America
Tel: 1-847-967-2400
Fax: 1-847-967-3915

Europe
United Kingdom
Tel: 44-1753-224000
Fax: 44-1753-224224

Latin America
Brazil
Tel: 55-11-3371-2500
Fax: 55-11-3371-2599

Middle East & Africa
United Arab Emirates
Tel: 971-481-27800
Fax: 971-488-62830

Asia Pacific
Singapore
Tel: 65-6518-1800
Fax: 65-6518-1803

If the products featured will be used in a potentially dangerous and/or hazardous process, your John Crane representative should be consulted prior to their selection and use. In the interest of continuous development, John Crane Companies reserve the right to alter designs and specifications without prior notice. It is dangerous to smoke while handling products made from PTFE. Old and new PTFE products must not be incinerated. ISO 9001 and ISO14001 Certified, details available on request.